


VICTORY WINDOW VAE SERIES

MULLING INSTRUCTIONS


03-14-2024 ACG

TRIM NAILING FLANGE OFF
THE SIDE TO BE CONNECTED
KEEP THE CUT FLUSH TO + 1/32"

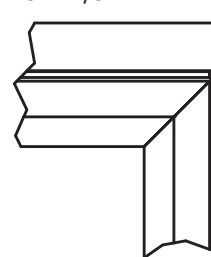


DETAIL C
SCALE 1 / 3

CLEAR OUT CHANNEL
USING A DREMEL TOOL

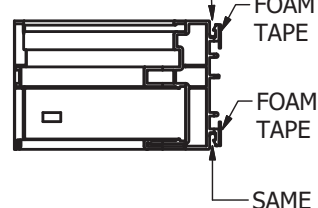


SECTION VIEW OF JAMB

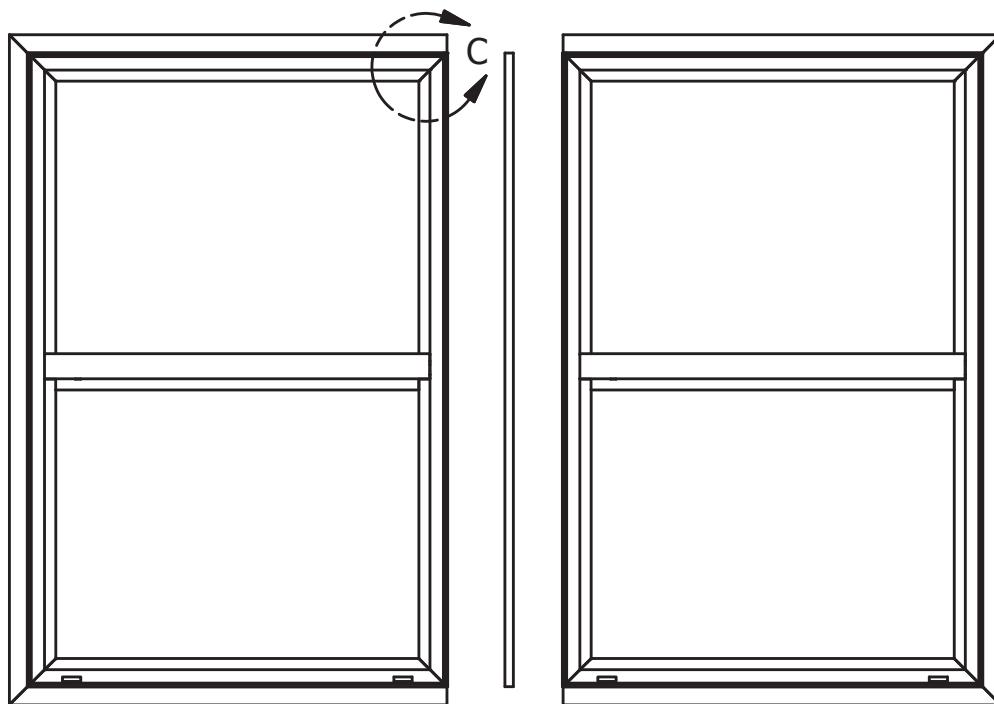

MULLED VERTICAL SINGLE HUNG WINDOWS

3/8" X 1/16" FOAM TAPE
ADHESIVE ONE SIDE (x 2)

FLUSH FRAME
CONNECTOR

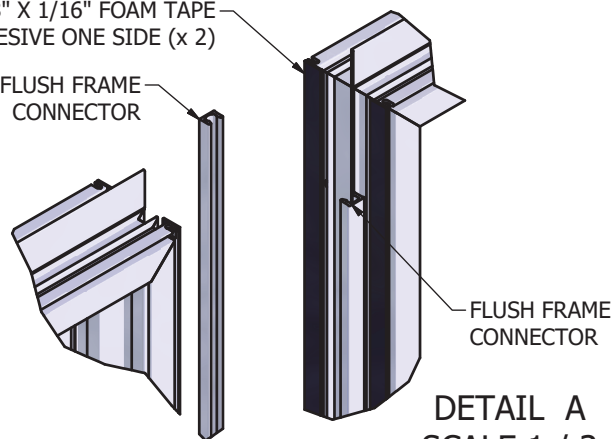


DETAIL A
SCALE 1 / 3



LAY OUT WINDOWS, APPLY FOAM TAPE FULL
LENGTH OF THE JAMBS IN FOUR (4) LOCATIONS
ALIGNED WITH THE FRAME AS SHOWN

ALIGN THE TWO WINDOWS - KEEP THE FRAME
CONNECTOR FLUSH WITH THE TOP OF THE
FRAME AND TAP INTO PLACE TO PULL THE
TWO WINDOWS TOGETHER

IN LIEU OF FOAM TAPE, SILICONE SEALANT
COMPATIBLE WITH PVC MAY BE USED

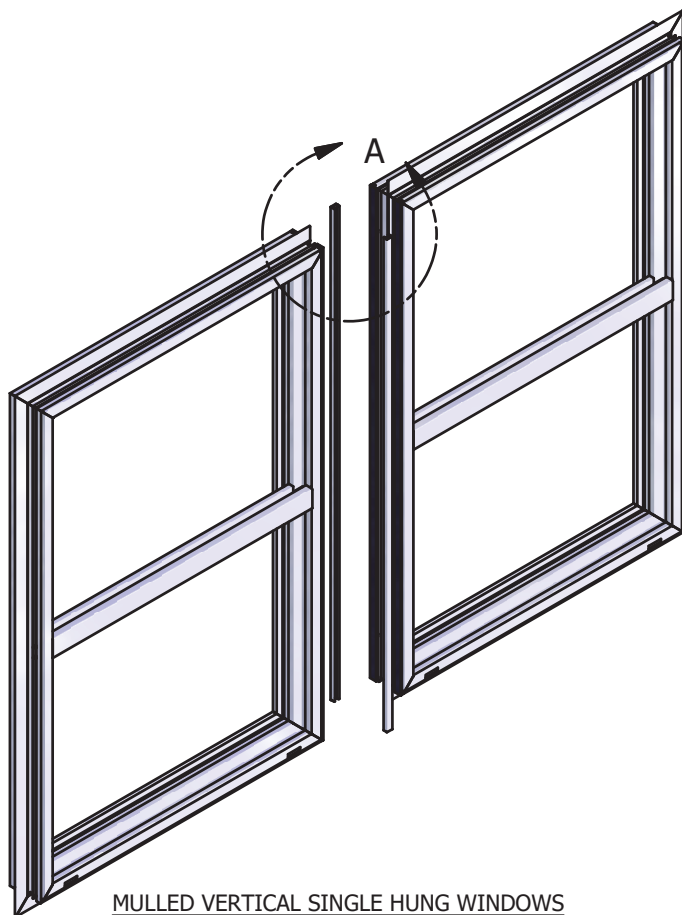

MULLED VERTICAL SINGLE HUNG WINDOWS

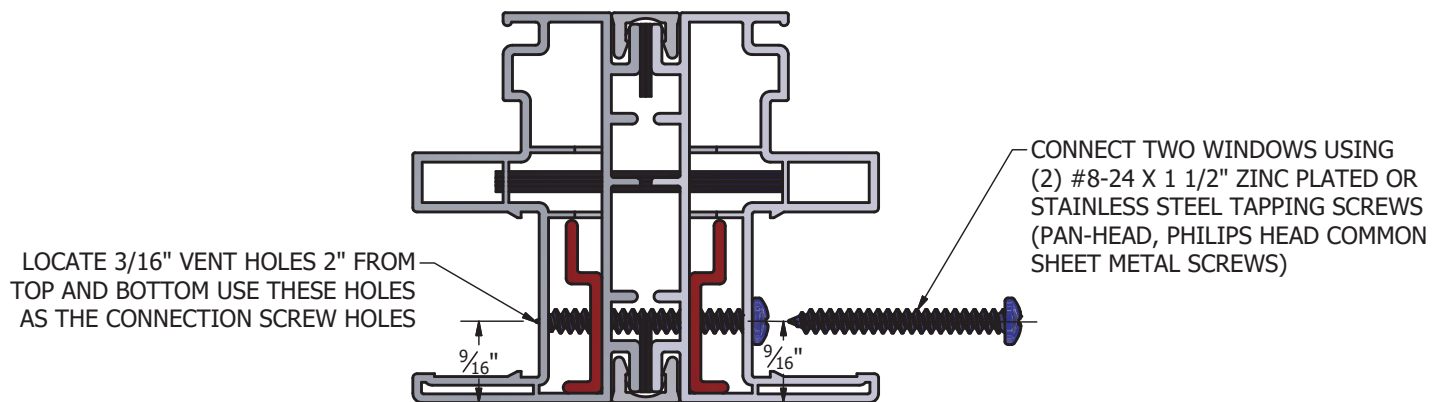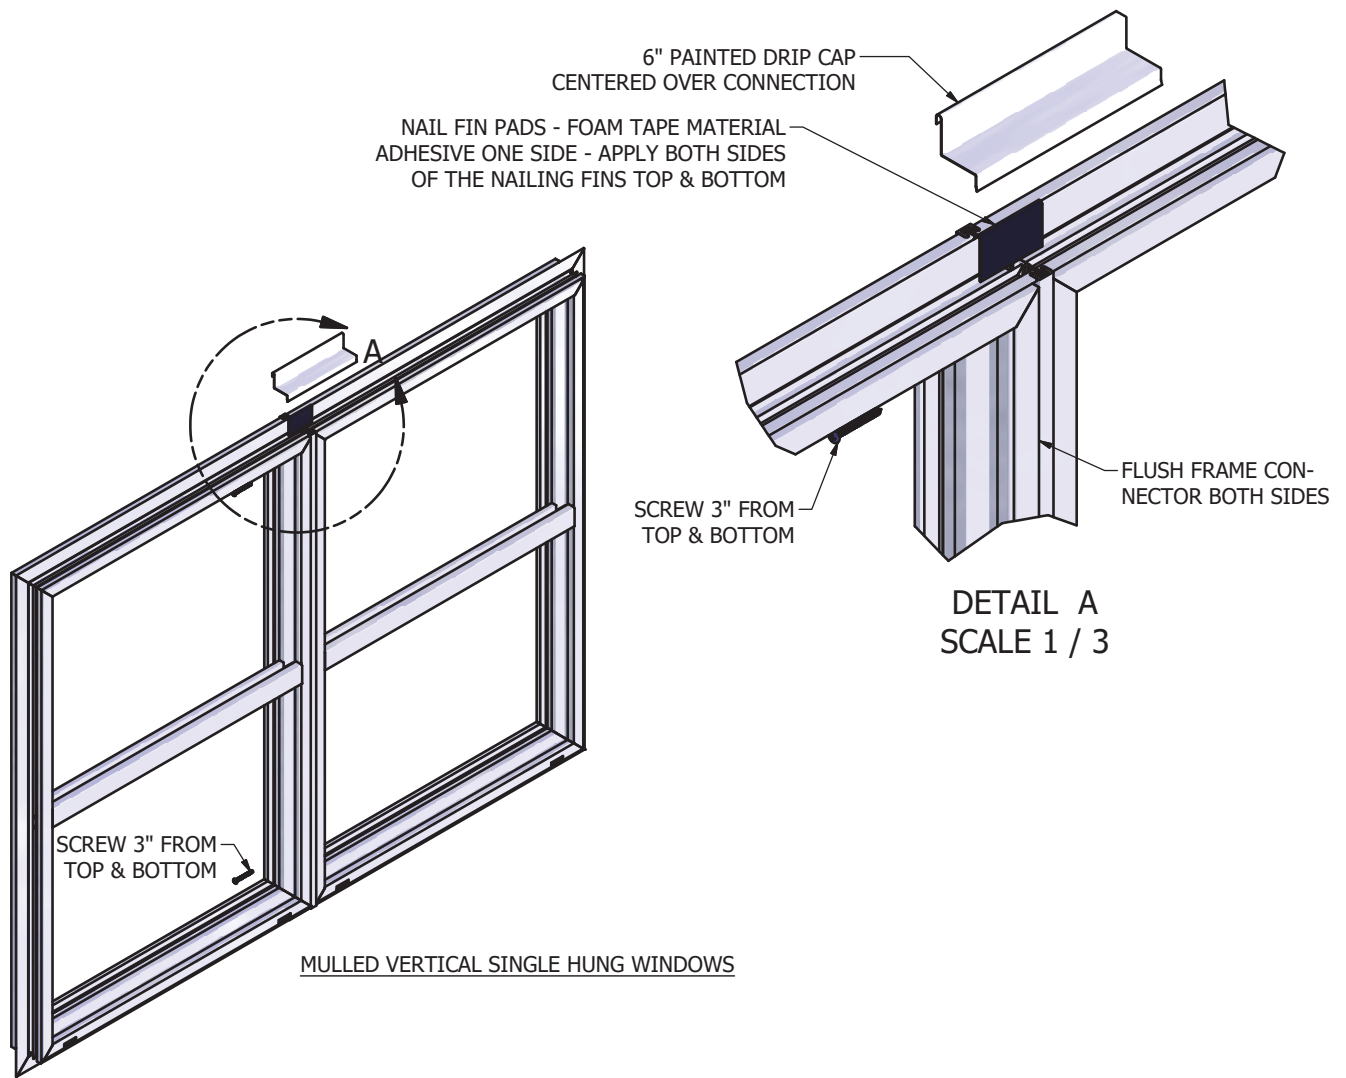

SECTION VIEW FROM TOP
OF MEETING JAMBS

NOTE: JAMB COMPONENTS ARE VENTED
USING (2) 3/16" THRU-HOLES TO AID
IN DRAINAGE - DO NOT SEAL OVER THESE
VENTILATION HOLES